


Instructions for LCD Alarm Clock

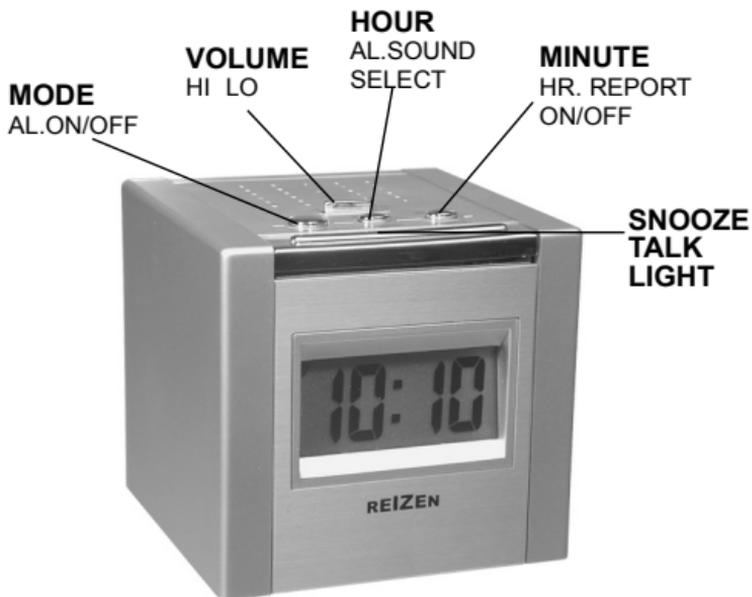

Features

Soft green back light display

3 alarm sounds selection: Rooster, Steady Beeps, Cuckoo

Hourly announcement

Large SNOOZE / LIGHT / TALK Button

High/Low volume time announcement

Requires two "AA" Batteries

Top Speaker

To Operate Clock

This clock requires two "AA" size batteries. Follow the battery polarity indication inside the battery compartment carefully when installing batteries.

Set Time

Press the Mode button until the display is flashing and the icons "Zz" and "🕒" appear, then press HOUR or MINUTE buttons to set time correctly.

Set Alarm

Press the Mode button until the display is flashing and the icons "Zz", "🕒" and "AL" appear, then press HOUR or MINUTE buttons to set alarm time correctly.

Use Alarm

Press the Mode button until the icons "Zz" and "🕒" appear, which means the alarm is turned on. Press the Mode button until the icons "Zz" and "🕒" disappear. The alarm is turned-off permanently.

Stop Alarm

Press any button (except SNOOZE / LIGHT) when the alarm is sounding, the alarm will stop and sound again next day.

Use Snooze

Press SNOOZE / LIGHT Button when the alarm is sounding, the snooze icon "Zz" and "🕒" are blinking, which means the snooze function is activated. The alarm will stop and sound again every 10 minutes. You can repeat the snooze function as many times as you like.

Hourly Announcement

Press the Minute (HR Report ON/OFF) button once, the icon 🕒 will show on the upper left corner of display means this function is activated.

To Use the Display Back Light

Press and hold the SNOOZE / LIGHT / TALK Button, it will announce current time and green soft back light will glow for visual display at night.

Alarm sound selection

Press the HOUR button to hear each alarm sound (Rooster, Steady Beep, Cuckoo). Choose your desired alarm sound.