


# Instructions for LCD Alarm Clock

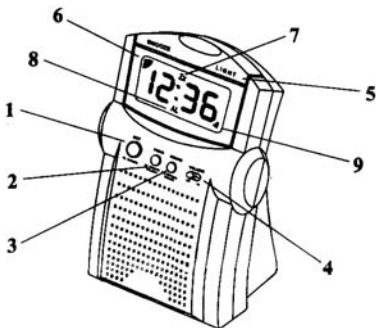

1. Mode / Alarm On/Off button
2. Hour / Alarm sound select button
3. Minute / Hr. Report On/Off button
4. Volume Lo/Hi switch
5. Snooze / Light / Talk button
6. Hr. Report icon
7. Snooze icon
8. Alarm Set icon
9. Alarm On icon

## To Operate Clock

This clock requires two "AA" size batteries. Follow the battery polarity indication inside the battery compartment carefully when installing batteries.

### **Set Time**

Press the Mode button until the display is flashing and the icons "Zz" and "🕒" appear, then press HOUR or MINUTE buttons to set time correctly.

### **Set Alarm**

Press the Mode button until the display is flashing and the icons "Zz", "🕒" and "AL" appear, then press HOUR or MINUTE buttons to set alarm time correctly.

### **Use Alarm**

Press the Mode button until the icons "Zz" and "🕒" appear, which means the alarm is turned on. Press the Mode button until the icons "Zz" and "🕒" disappear. The alarm is turned-off permanently.

### **Stop Alarm**

Press any button (except SNOOZE / LIGHT) when the alarm is sounding, the alarm will stop and sound again next day.

### **Use Snooze**

Press SNOOZE / LIGHT Button when the alarm is sounding, the snooze icon "Zz" and "🕒" are blinking, which means the snooze function is activated. The alarm will stop and sound again every 10 minutes. You can repeat the snooze function as many times as you like.

### **Hourly Announcement**

Press the Minute (HR Report ON/OFF) button once, the icon 🕒 will show on the upper left corner of display means this function is activated.

### **To Use the Display Back Light**

Press and hold the SNOOZE / LIGHT / TALK Button, it will announce current time and green soft back light will glow for visual display at night.

### **Alarm sound selection**

Press the HOUR button to hear each alarm sound (Rooster, Steady Beep, Cuckoo). Choose your desired alarm sound.